

233: Fuel pump and strainer, B4164T, MMT6



13/4/2015

PRINT

233: Fuel pump and strainer, B4164T, MMT6

Operation number:
17433-3

Operation number:
23307-2

**Extra fuel filter
Removal**

**Note! Removal
steps in this
procedure may
contain
installation details.**

Follow instructions
about safety
information gasoline-
fuel system


Refer to: Safety
information gasoline
- fuel system

Perform
depressurizing fuel
system

Refer to: Fuel
system pressure
release

Follow instructions
for lifting points body
frame

Refer to: Jacking
points body

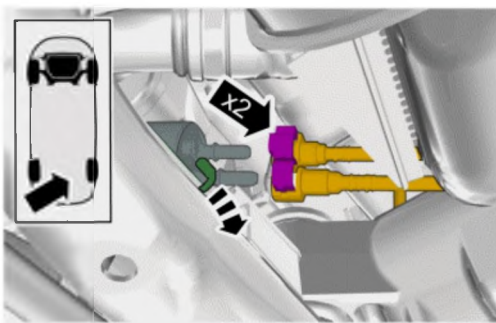




**Warning! Be prepared to
collect escaping fluid.**

**Caution! Note the routing of
the lines and hoses.**

Undo the hoses from the
connections.

Torque: M6, 10 Nm

Remove the screws.

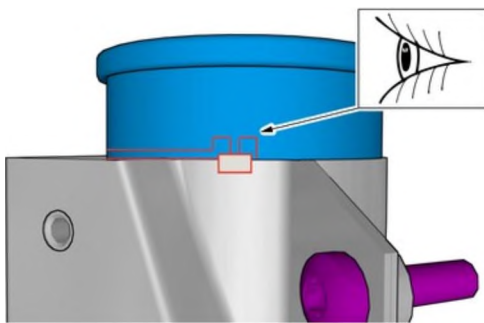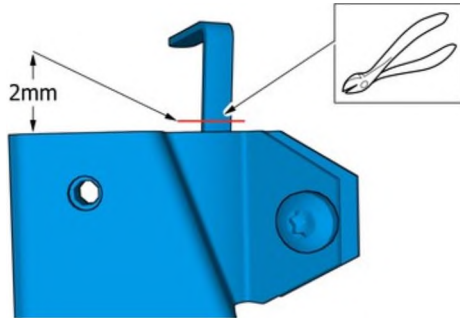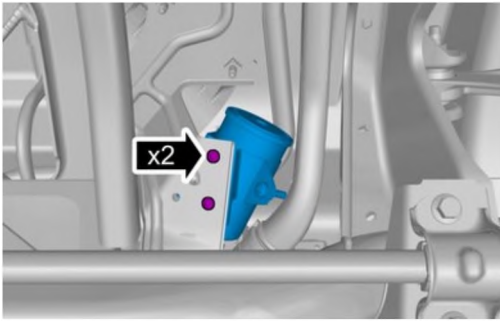

Installation

To install, reverse the removal procedure.

Note! Note the position.

Torque: M6, 10 Nm

Caution! Make sure that the quick release couplings are correctly engaged.

PRINT

13/4/2015

872: Air distribution






PRINT




13/4/2015

872: Air distribution

Operation number:
87211-2

Pollen filter
climate control
system
Removal

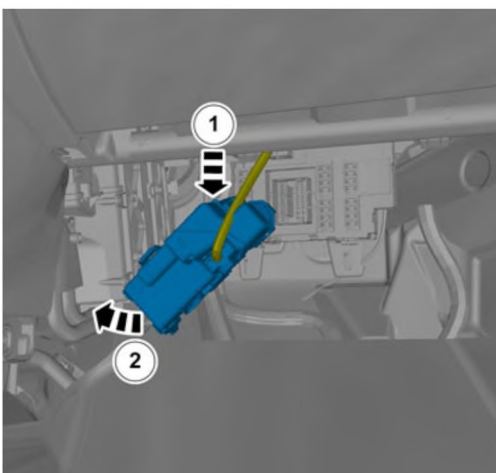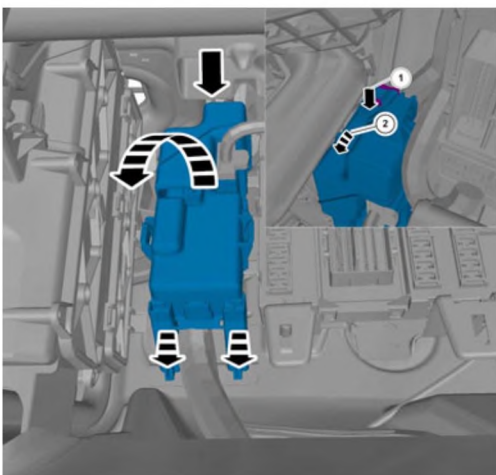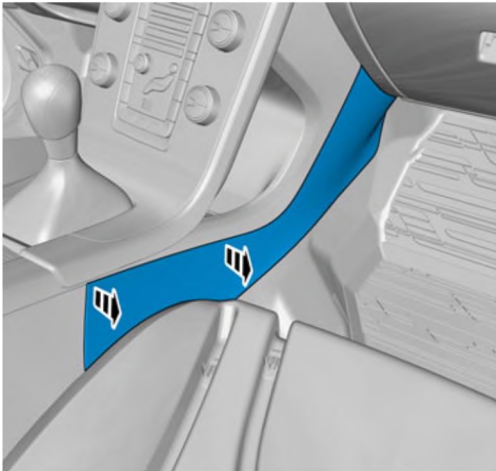

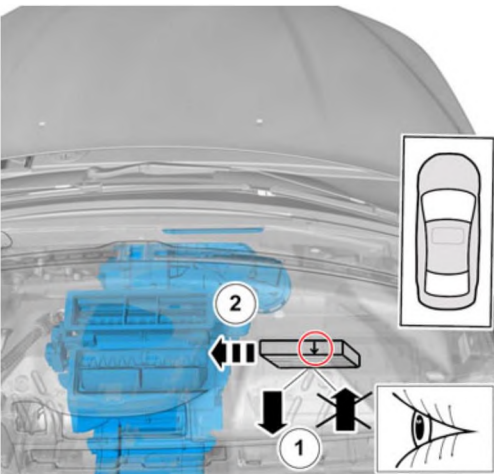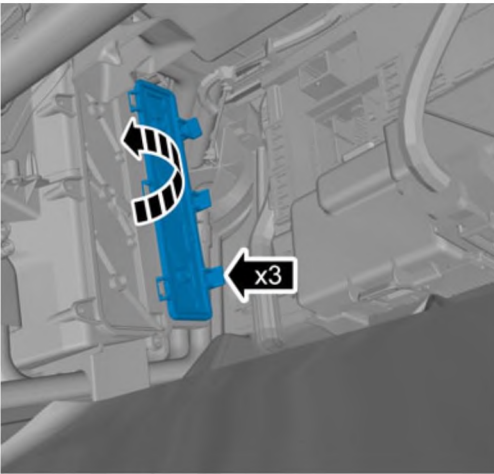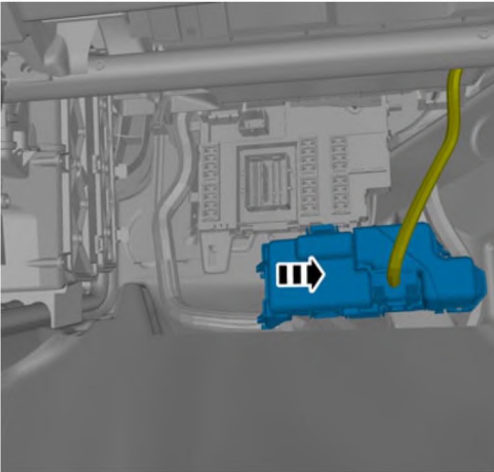

Installation

Note! Ensure that the arrow points in the correct direction.

To install, reverse the removal procedure.

PRINT

13/4/2015

222: Oil filter, B4164T




13/4/2015

PRINT

222: Oil filter, B4164T

Operation number:
22217-2

Oil filter

Special tools	
	<p>951 2940 Counterhold Tool number:951 2940 Tool description:Counterhold Tool boards:46</p>



Removal


Note! Removal steps in this procedure may contain installation details.

See information about lifting points body

Refer to: Jacking points body

Warning! Hot fluid.

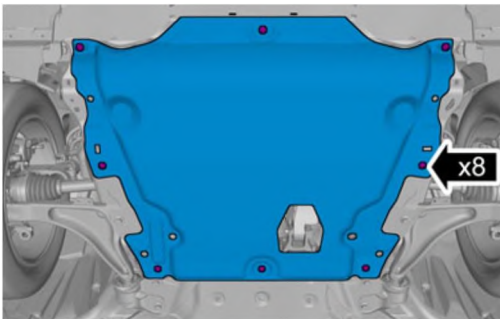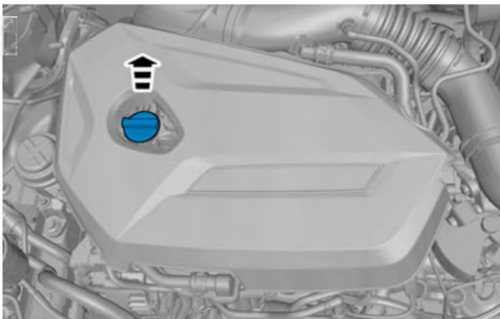


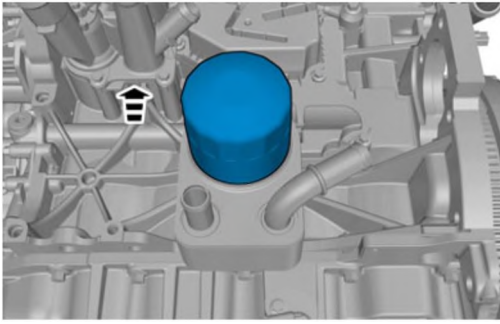

Warning! Be prepared to collect escaping fluid.


Special Tool: 951 2940

Torque: Oil filter , 17 Nm

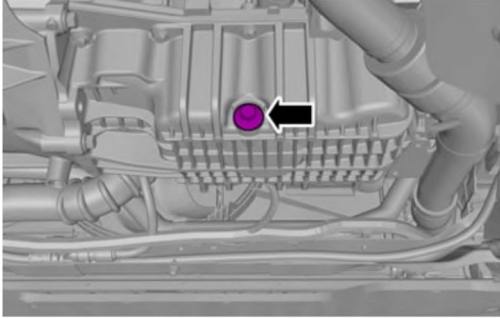

Warning! Be prepared to collect escaping fluid.

Torque: Drain plug oil pan, 27 Nm

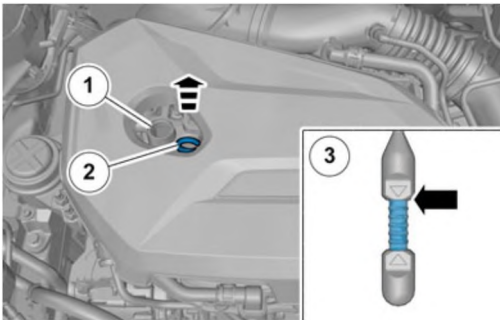

Installation

To install, reverse the removal procedure.

1. See information about lubricants, engine

Refer to: Lubricants, engine

- 2.
3. **Caution!** Make sure that fluid level is to the MAX mark.

13/4/2015

PRINT

872: Air distribution



13/4/2015




PRINT




872: Air distribution

Operation number:
87211-2

Pollen filter
climate control
system

Removal

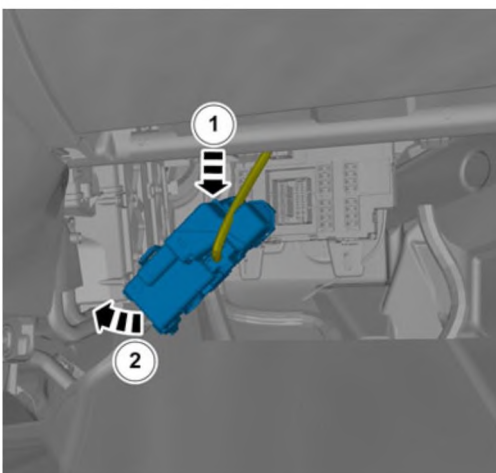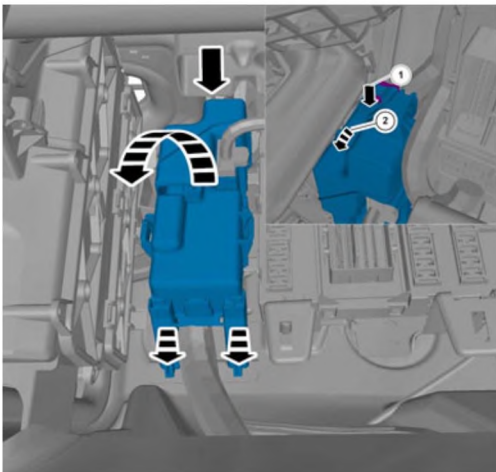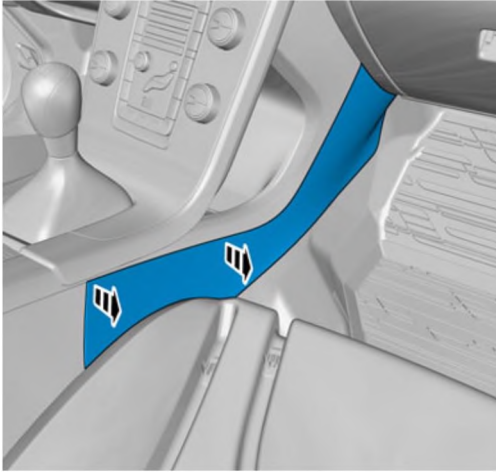

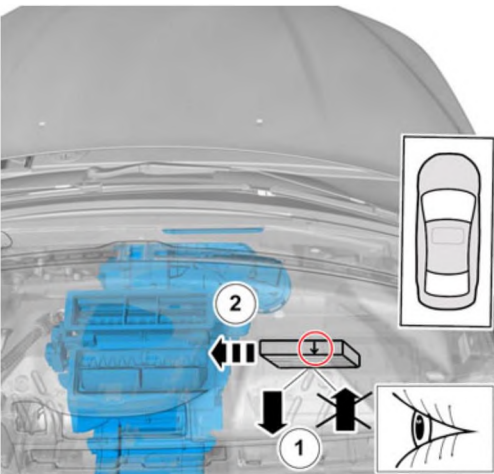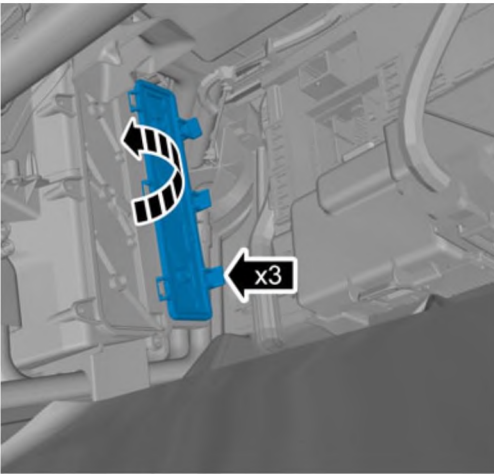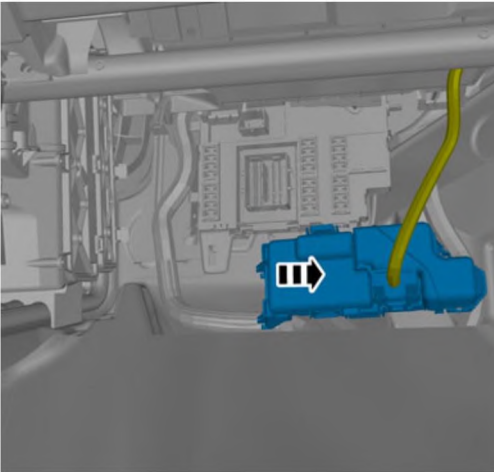

Installation

Note! Ensure that the arrow points in the correct direction.

To install, reverse the removal procedure.

PRINT

13/4/2015

222: Oil filter, D5244T12



13/4/2015



PRINT

222: Oil filter, D5244T12

Operation number:
22217-2



Oil filter
Removal

Warning! Hot fluid.

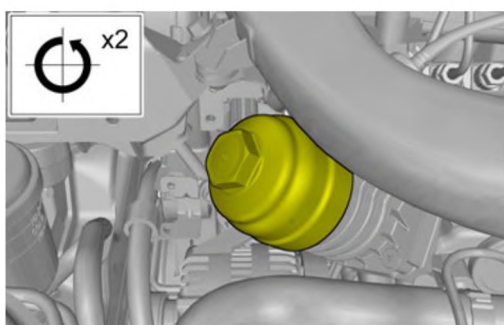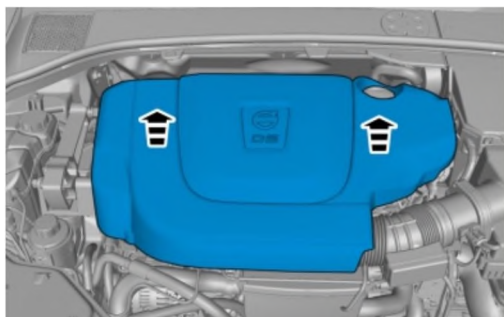


Caution! Cover the alternator to avoid oil spill on the alternator.

Note! Use suitable paper to absorb any escaping fluid.

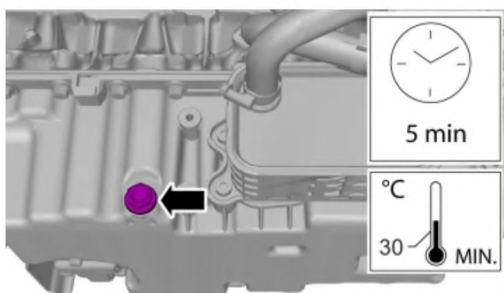
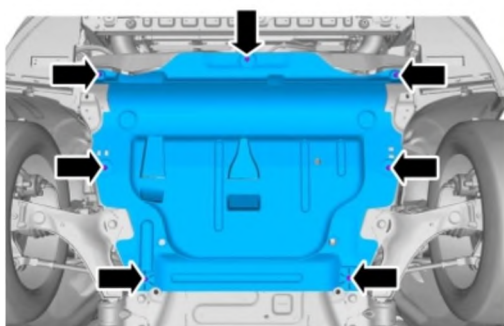


Installation

Torque: Drain plug oil pan, 50

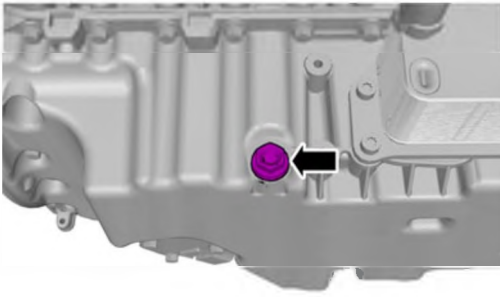


Nm

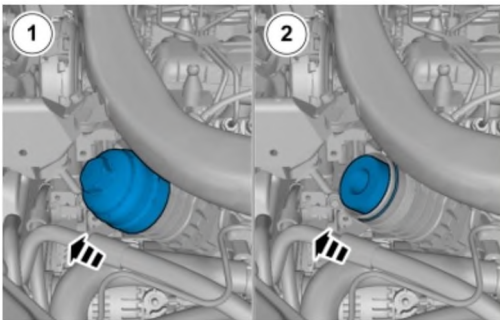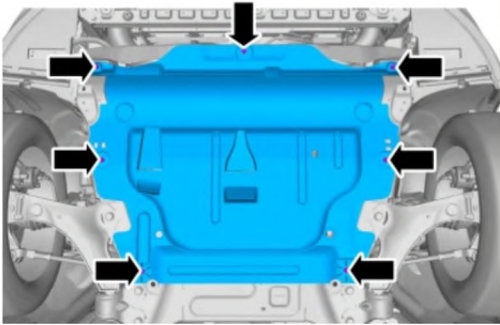


Caution! Use suitable paper to absorb any escaping fluid.

Caution! Take extra care when handling the components.

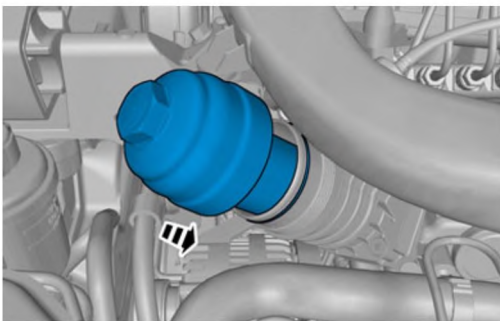



Torque: Cover oil filter, 25 Nm

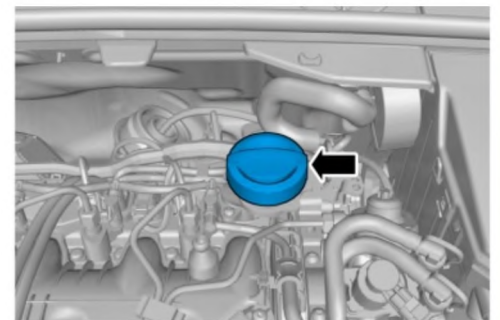

Follow instructions for engine oil

Refer to: Lubricants, engine

Caution! The level must not exceed 2/3.

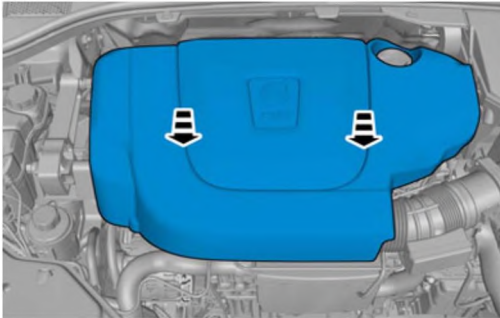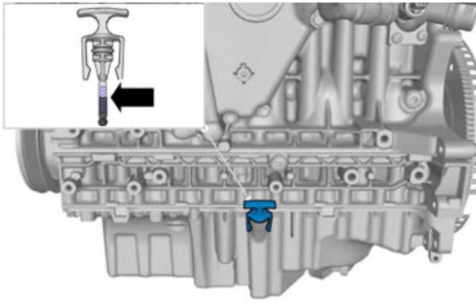

To install, reverse the removal procedure.

PRINT

13/4/2015

872: Air distribution






PRINT




13/4/2015

872: Air distribution

Operation number:
87211-2

Pollen filter
climate control
system
Removal

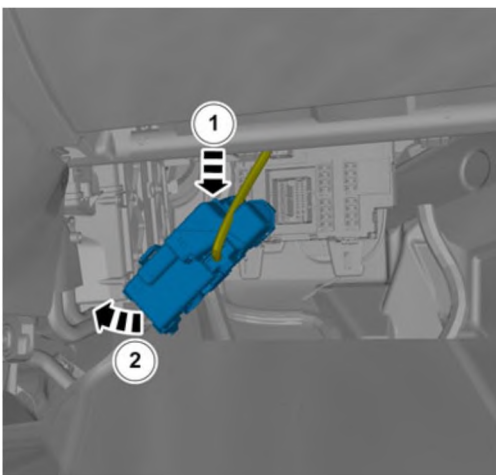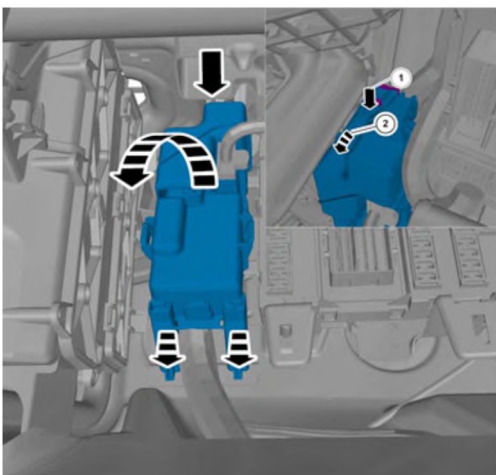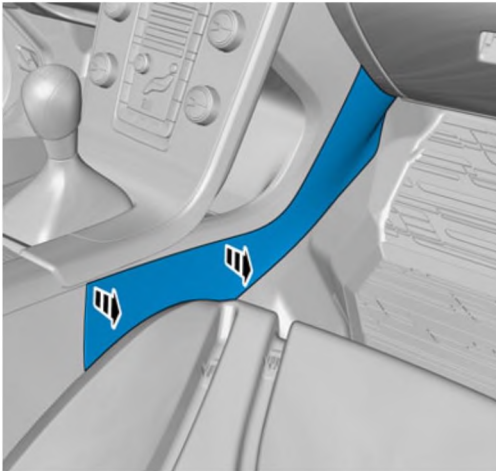

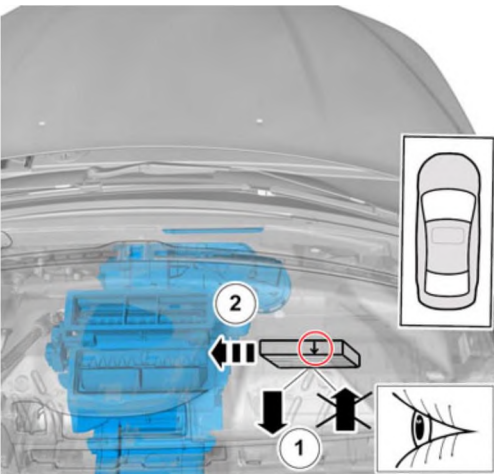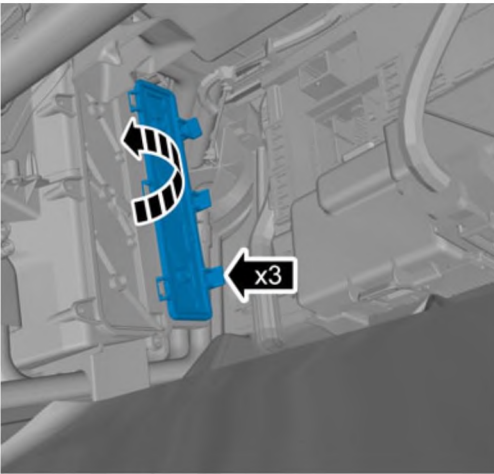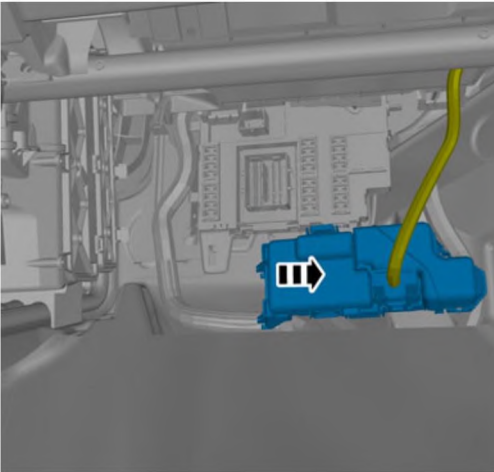

Installation

Note! Ensure that the arrow points in the correct direction.

To install, reverse the removal procedure.

PRINT

13/4/2015

233: Fuel pump and strainer, D5244T12, TF-80SC AWD



13/4/2015

PRINT

233: Fuel pump and strainer, D5244T12, TF-80SC AWD

Operation number:
23305-2

Fuel filter


Special tools	
 <p>VOLVO 9997084</p>	<p>999 7084 Key Tool number:999 7084 Tool description:Key Tool boards:23</p>

Removal

Note! Removal steps in this procedure may contain installation details.


Follow instructions for lifting points body frame

Refer to: Jacking points body

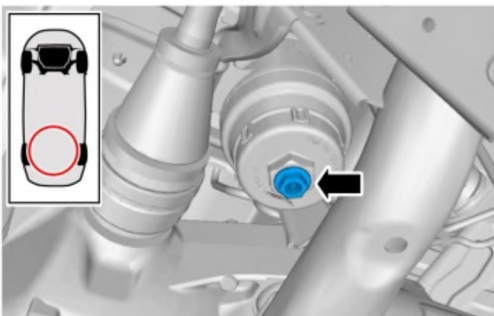


Warning! Be prepared to collect escaping fluid.

Torque: Draining screw to fuel filter, 2 Nm

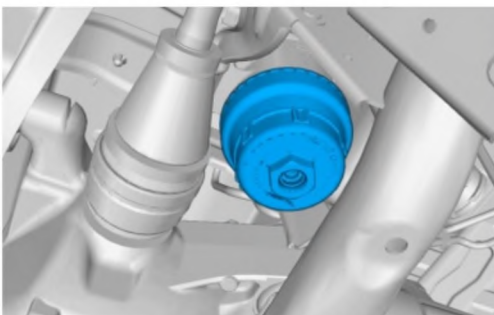

Special Tool: 999 7084

Torque: Fuel filter , 25 Nm

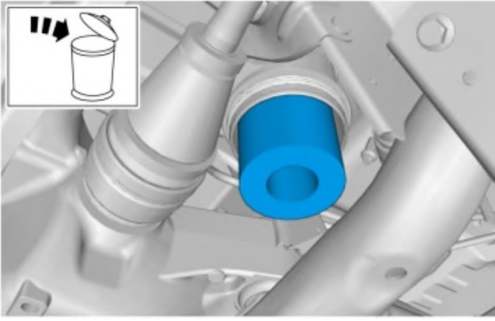

13/4/2015

Installation

To install, reverse the removal procedure.

PRINT

222: Oil filter, D5244T12



13/4/2015



PRINT

222: Oil filter, D5244T12

Operation number:
22217-2



Oil filter
Removal

Warning! Hot fluid.

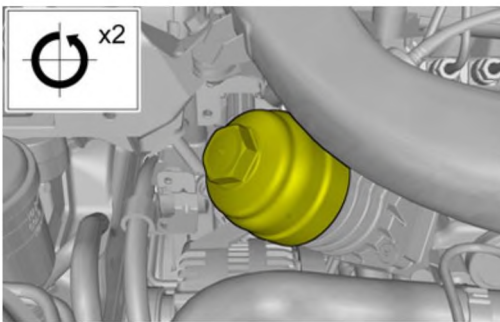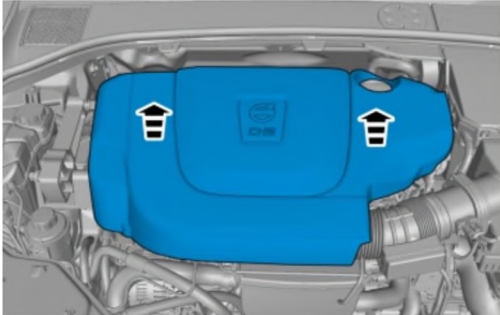


Caution! Cover the alternator to avoid oil spill on the alternator.

Note! Use suitable paper to absorb any escaping fluid.

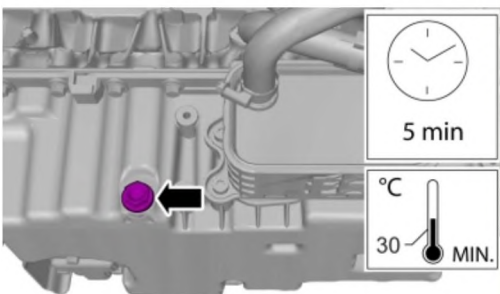
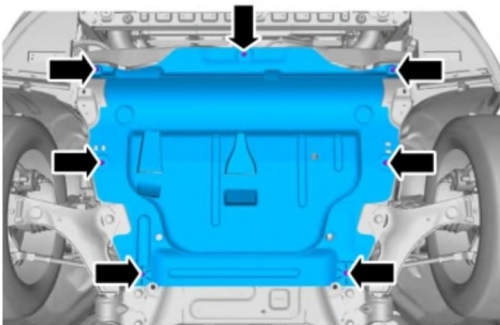


Installation

Torque: Drain plug oil pan, 50

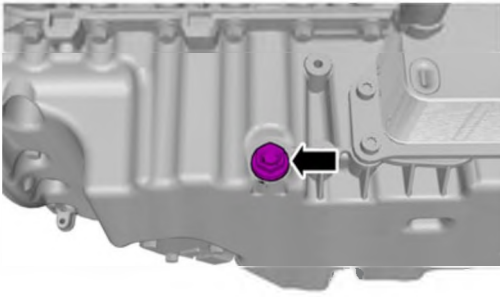


Nm

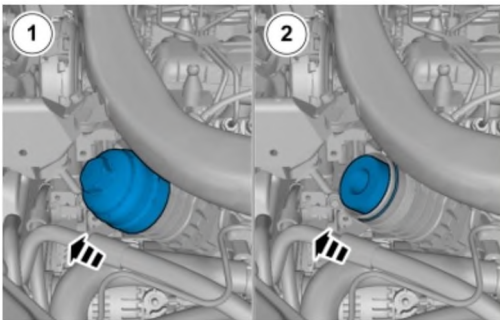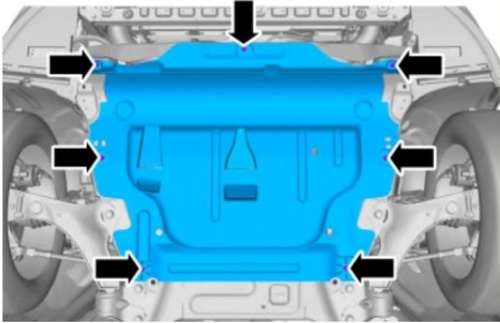


Caution! Use suitable paper to absorb any escaping fluid.

Caution! Take extra care when handling the components.

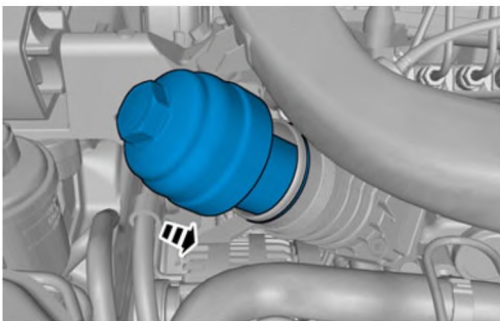



Torque: Cover oil filter, 25 Nm

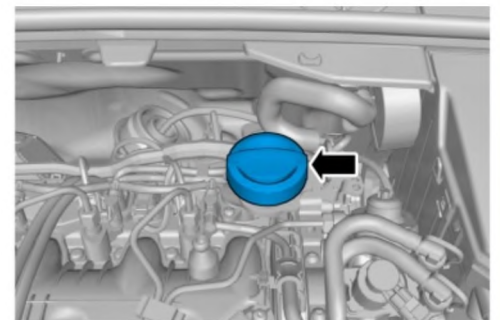

Follow instructions for engine oil

Refer to: Lubricants, engine

Caution! The level must not exceed 2/3.

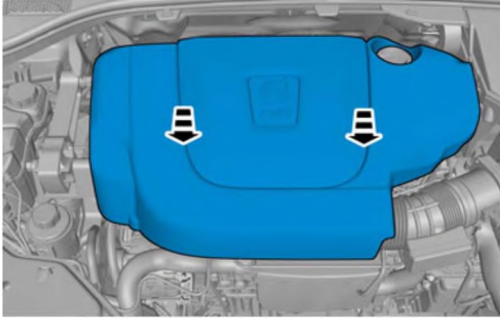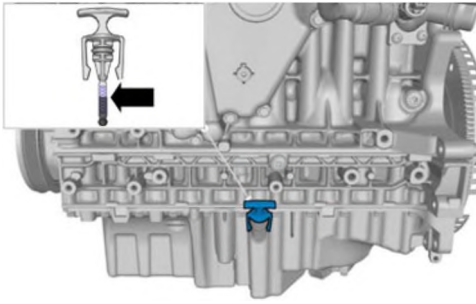

To install, reverse the removal procedure.

PRINT

13/4/2015